


# Rotary Measuring Technology

## Absolute Multiturn Encoder with optional incremental track

### Multiturn ESAM 90 SSI or RS 485, programmable

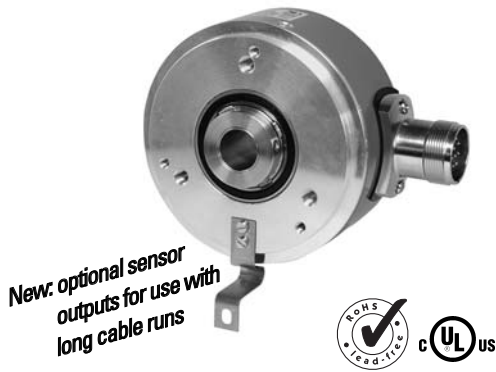

- Electronic multiturn gear with patented intelligent sensing technology (IST)
- Hollow shaft up to  $\varnothing 28$  mm (ENAM 90) or shaft  $\varnothing 12$  mm (ESAM 90)
- Only 50 mm clearance needed
- Programming parameters include\*: code type, resolution per revolution, total resolution, direction of rotation (cw or ccw), zero point.
- Very easy mounting of the hollow shaft version. The encoder is mounted directly

on the drive shaft without couplings. This saves up to 30 % cost and 50 % clearance compared to shaft versions.

- Max. 4 programmable outputs\* for the SSI version
- Divisions: 8192 (13 bits) per revolution, 4096 (12 bits) revolutions
- SSI interface, additional interfaces include RS 485 and OEM specific protocols
- Four programmable outputs
- optional with incremental track 2048 ppr.
- available as explosion proof zone 2 and 22

#### Mechanical characteristics:

Speed: 1)	max. 6000 min <sup>-1</sup>
Rotor moment of inertia:	approx. 65 x 10 <sup>-6</sup> kgm <sup>2</sup>
Starting torque hollow shaft version:	< 0.2 Nm
Starting torque shaft version:	< 0.05 Nm
Radial load capacity of shaft (hollow shaft): <sup>2)</sup>	80 N
Axial load capacity of shaft: (shaft): <sup>2)</sup>	40 N
Weight:	approx. 0.7 kg
Protection acc. to EN 60 529:	IP 65
Working temperature:	-20° C ... +70 °C <sup>3)</sup>
Operating temperature:	-20° C ... +80 °C <sup>3)</sup>
Shaft:	stainless steel H7
Shock resistance acc. to DIN-IEC 68-2-27	2500 m/s <sup>2</sup> , 6 ms
Vibration resistance acc. to DIN-IEC 68-2-6:	100 m/s <sup>2</sup> , 10 ... 2000 Hz

- 1) For continuous operation 3000 min<sup>-1</sup>  
 2) At shaft version only (at shaft end)  
 3) Non-condensing

#### Divisions and code types available at short notice:

24 Bit Binary / Gray  
 25 Bit Binary / Gray  
 Other divisions and code types on request

#### The programmable SSI versions are available in 3 variants:

##### Order code Interface 2:

Version with 4 programmable outputs

##### Order code Interface 4:

Version with incremental outputs A,A,B,B (no programmable outputs)

##### Order code Interface 9:

Version with 2 programmable outputs and 2 sensor outputs for 0 V and +U<sub>B</sub> for controlling the supply voltage on the encoder.

#### Electrical characteristics:

Interface type:	Synchronous-Serial (SSI) with outputs
<b>General:</b>	
Supply voltage (U <sub>B</sub> ):	5,0 ... 30 V DC <sup>3)</sup>
Current consumption type (no load):	89 mA
max (no load):	138 mA
Short circuit proof outputs: <sup>1)</sup>	yes <sup>2)</sup>
Reverse connection protection at U <sub>B</sub> :	yes
<b>SSI-Interface:</b>	
Output driver:	RS 485
Permissible load/channel:	max. +/-20 mA
Update rate for position data:	approx. 1600/s
SSI pulse rate min./max./pulse frequency:	100 kHz/500 kHz
Signal level high:	typ. 3.8 V
Signal level low (I <sub>Last</sub> = 20 mA):	typ. 1.3 V
Rise time t <sub>r</sub> (without cable):	max. 100 ns
Fall time t <sub>f</sub> (without cable):	max. 100 ns
<b>Control inputs:</b>	
Voltage:	5 ... 30 V DC = U <sub>B</sub>
(V/R, SET) Response time:	10 ms
Signal level: low	max. 25% U <sub>B</sub>
high	min. 60% U <sub>B</sub> , max. U <sub>B</sub>
Max. current load	≤0.5 mA

#### Status outputs:

Output driver:	Push-Pull
max. permissible load:	±9.0 mA
Signal level high:	min. U <sub>B</sub> - 3.0 V
low:	max. 1.5 V
Rise time:	max. 240 μs
Fall time:	max. 300 μs

#### Incremental outputs (A/B):

Output driver:	RS422 compatible
Pulse frequency (max.):	200 kHz
Signal level high:	4.5 V
Signal level low (I <sub>Last</sub> = 20 mA):	0.5 V
Rise time (without cable):	max. 200 ns
Fall time (without cable):	max. 200 ns

Conforms to CE requirements acc. to EN 61000-6-1, EN 61000-6-4 and EN 61000-6-3

Performance against magnetic influence acc. to EN61000-4, 5

- 1) If U<sub>B</sub> supply voltage correctly applied U<sub>B</sub>  
 2) Only one channel allowed to be shorted-out  
 If U<sub>B</sub> = 5 V DC, short-circuit to output, 0 V and + U<sub>B</sub> is permitted.  
 If U<sub>B</sub> < 5 V DC short-circuit to output and 0 V is permitted.

3) The supply voltage at the encoder input must not be less than 4.75 V (5 V - 5%)

### Multiturn ESAM 90 SSI or RS 485, programmable

#### Control inputs:

#### F/R input for change of direction:

The encoder can output increasing code values when the shaft is rotated either clockwise or counter-clockwise (when looking from the shaft side).

There are two methods for selecting the appropriate option:

1. Via hardware configuration of the F/R input BEFORE powering up the encoder
2. By programming the device using the Micronor programming tool.

The following table shows the function selection dependent on hardware and software settings:

Hardware configuration of the F/R input:

Hardware configuration of the F/R input	Programmed selection using the Micronor programming tool	Function: increasing code value when the shaft is in the following direction:
"low" (0V) on the F/R input (=cw)	cw	cw
"high" (+UB) on the F/R input (= ccw)	cw	ccw
"low" (0V) on the F/R input (=cw)	ccw	ccw
"high" (+UB) on the F/R input (= ccw)	ccw	ccw

#### Notes:

- Any hardware configuration of the F/R input must take place BEFORE powering up the encoder!
- If the F/R input is not configured, then a 0V configuration will apply (default condition)!
- If the direction of rotation is changed due to the F/R configuration, without activating the SET function again, and if the encoder is also then powered up again, a new position value may be outputted, even if the physical shaft position of the encoder has not moved! This is due to internal conversion processes.

The start-up procedure for the encoder should therefore follow this sequence:

1. Determine the count direction of the encoder either via the F/R input or via programming
2. Apply power to the encoder
3. Activate the SET function, if desired (see SET input below)

- If using a cable wire to configure the F/R input, then for EMC reasons the wire should not remain open but should be tied either to 0V or UB!
- The response time of the F/R input with UB = 5 ... 30 V DC power supply is 10 ms.

#### SET input:

This input is used for a one-time alignment (zeroing) of the encoder immediately after installation. A high control pulse (+UB) applied to this input for a minimum of 10 ms will reset the current encoder position to the pre-programmed setpoint value.

The programming of the setpoint can be carried out with Micronor's programming software or can, on request, be done in advance at the factory. The default value is zero. However any value within the encoder's measuring range can be defined.

#### Notes:

- SET function should only be implemented when the encoder shaft is at rest.
- For the duration of the SET pulse the SSI interface does not working and therefore does not output any valid position values! In order to avoid malfunctions, no SSI clock pulse should occur during the SET pulse.

- If a cable wire is used to configure the SET input, then for EMC reasons the wire should not remain open but should if at all possible be tied to 0 V, provided no SET pulse is triggered!
- The response time of the SET input with +UB = 5 ... 30 V DC power supply is 10 ms.

#### Encoder outputs<sup>1)</sup>

Output	Default-function:
A1:	battery control <sup>2)</sup>
A2:	not activated <sup>2)</sup>
A3:	not activated <sup>2)3)</sup>
A4:	not activated <sup>2)3)</sup>

The outputs are not activated in the factory setting (default). They can be activated and defined with the optional Micronor programming software e.g. limit switch, overspeed and temperature control etc.

- 1) Not available for versions with incremental track
- 2) Programmable with the optional programming software Micronor
- 3) With the order code Interface 9 assigned to the sense outputs.

#### Programmable function with optional Micronor software

Programmable features with optional programming tool Micronor

- Type of code
- Resolutions per revolution
- Number of revolution
- Total resolution
- Direction of rotation
- Offset for mechanical zero point compensation etc....





# Rotary Measuring Technology

## Absolute Multiturn Encoder with optional incremental track

### Multiturn ESAM 90 SSI or RS 485, programmable

Order code:

ESAM 90.XXXX.XXXX

